
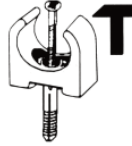



Installation

Description:	Fasten gripper clamp with wooden screw in anchor already driven in.	Fasten gripper clamp with drive anchor	Fix Schnabl gripper clamp with integrated anchor
			
Materials:	Anchors, wooden screw, gripper clamp	Screw with mounted anchor, gripper clamp	Integrated gripper clamp-anchor section (1. section)
Tools:	Cordless screwdriver	Hammer, beating iron	none
Process:	Situation: Gripper clamp should be fitted near floor level in the skirting board, fitter kneeling on the ground, material in bib pocket, tools lying on the ground close at hand.		
	<ol style="list-style-type: none"> 1. Take anchor, wooden screw, gripper clamp out of the pocket 2. Insert wooden screw into gripper clamp 3. Insert anchor by hand into the drill hole 4. Insert wooden screw with gripper clamp into anchor 5. Tighten screw with cordless screwdriver and remove screwdriver 	<ol style="list-style-type: none"> 1. Take drive anchor, gripper clamp out of the pocket 2. Insert drive anchor into gripper clamp 3. Insert drive anchor in gripper clamp into the drill hole 4. Drive in drive anchor with gripper clamp using riveting hammer, remove tool 	<ol style="list-style-type: none"> 1. Take gripper clamp-anchor element out of the pocket 2. Insert gripper clamp-anchor element by hand into the drill hole
Time required:	25 seconds	28 seconds	5 seconds